

# HOME

DECORATORS  
COLLECTION


## HAWTHORNE 6 DRAWER DRESSER 25"Hx44"W

SKU # 2048900120R (Dark Cherry)

SKU # 2048900550R (Oak)

SKU # 2048900410R (White)

SKU # 2048900210 (Black)

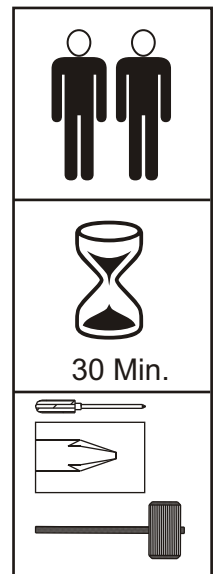


BEFORE BEGINNING ASSEMBLY, CHECK TO MAKE SURE ALL  
PARTS AND HARDWARE ARE ACCOUNTED FOR.

IT IS SUGGESTED THAT YOU SAVE THE CARTON AND PACKING  
MATERIAL UNTIL AFTER ASSEMBLY IS COMPLETED. SELECT A CLEAN,  
SMOOTH SURFACE TO WORK (SUCH AS CARPET).













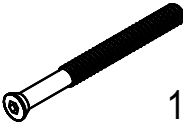

THEN, FOLLOW THE EASY STEPS BELOW.

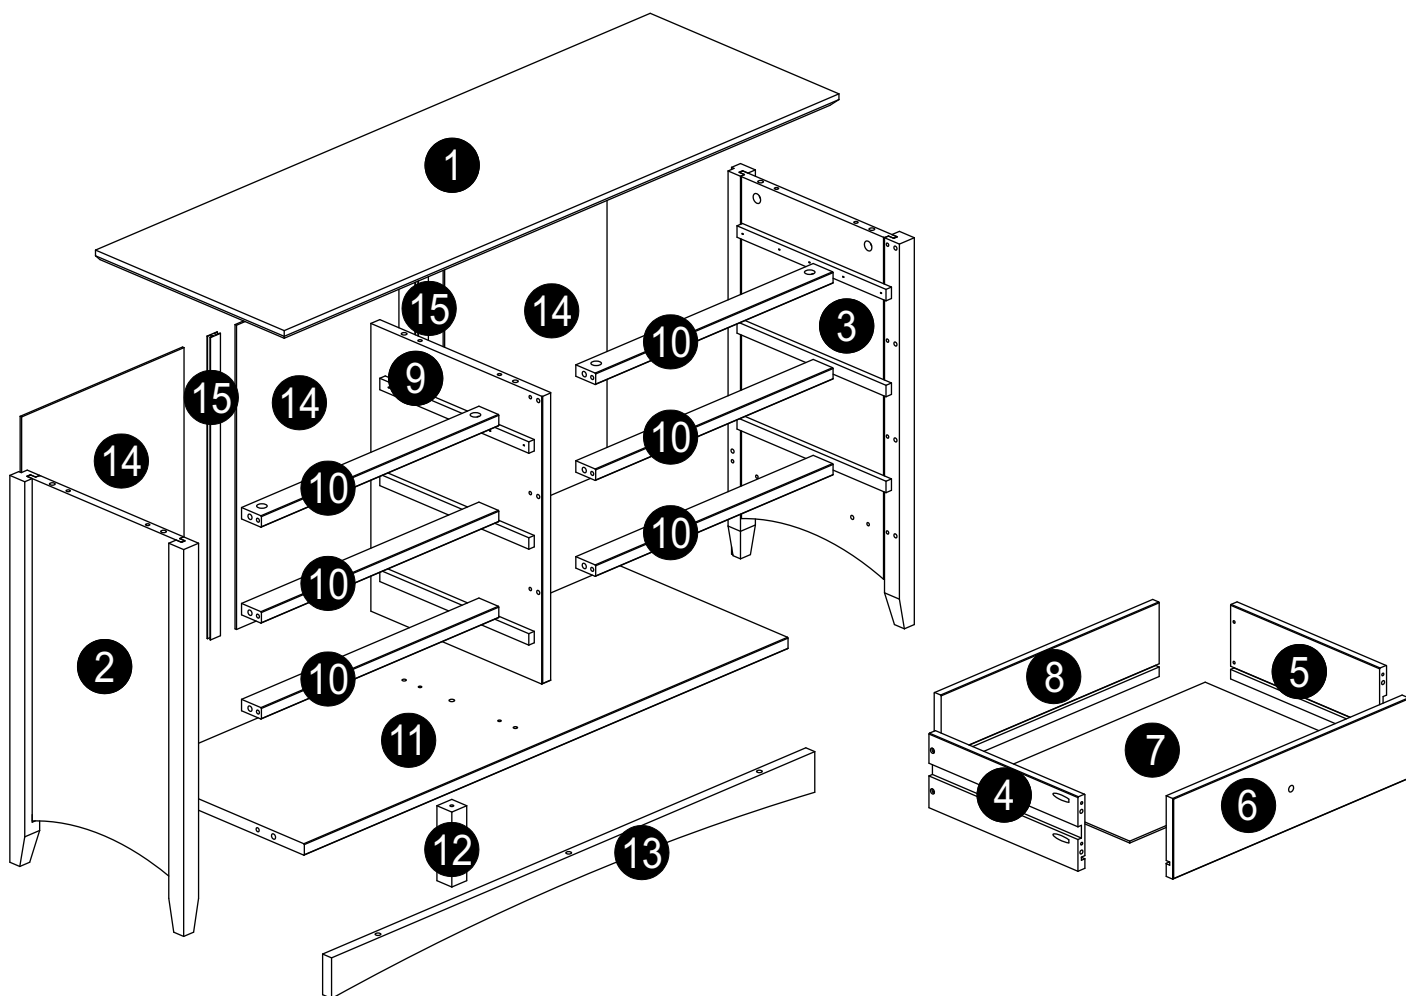
IF PARTS ARE MISSING, PLEASE CALL 1-800-998-7021 FOR INFORMATION.

MADE IN BRAZIL  
16 02 08 2



Part#	Qty	Description	Sizes (w x d x h)		
1	1	Top	44"	X 14 15/16"	X 11/16"
2	1	Left Side	24"	X 13 3/4"	X 1 5/8"
3	1	Right Side	24"	X 13 3/4"	X 1 5/8"
4	6	Left Drawer Side	11 13/16"	X 4 5/8"	X 9/16"
5	6	Right Drawer Side	11 13/16"	X 4 5/8"	X 9/16"
6	6	Drawer Front	18 11/16"	X 5"	X 9/16"
7	6	Drawer Bottom	17 3/4"	X 11 3/4"	X 1/8"
8	6	Drawer Back	17 5/16"	X 4 5/8"	X 9/16"
9	1	Division Panel	17 13/16"	X 13 9/16"	X 1 5/8"
10	6	Rail	15 15/16"	X 1 1/2"	X 11/16"
11	1	Bottom panel	38 3/8"	X 2 1/2"	X 11/16"
12	1	Central Foot	4 5/8"	X 1 3/16"	X 1 3/16"
13	1	Front Rail	38 5/16"	X 2 1/2"	X 11/16"
14	3	Back Panel	18 7/8"	X 12 1/2"	X 1/8"
15	2	Panel Connector	18 3/4"	X 13/16"	X 1/4"

A	 1/4" x 1 3/16"	48
B		25
C		25
D	 1/8" x 1 3/16"	48
E	 1/16" x 7/8"	24
F		6
G	 1/8" x 1 3/16"	6
H		6
I	 1/8" x 5/8"	6
J		1
K		1
L	 3/16" x 1 9/16"	2
M	 1/4" x 1 15/16"	1
N		1





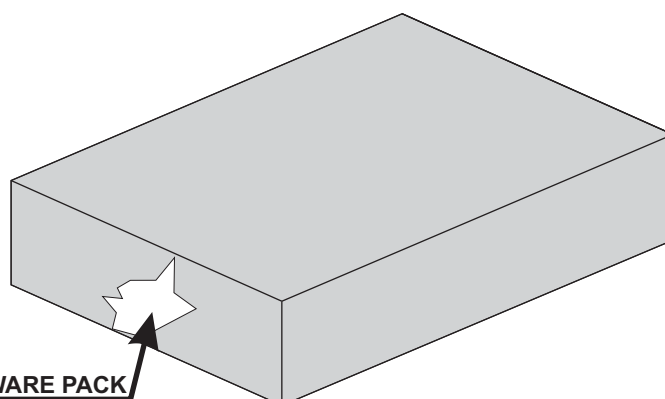


**HARDWARE PACK**

# STEP 1






1. Prepare for future assembly by:

- \* Insert wood dowels (A) into all drawer sides (4) & (5)
- \* Insert wood dowels (A) into the side parts (2) & (3)
- \* Insert wood dowels (A) into the divider (9)
- \* Insert wood dowels (A) into the bottom panel (11)
- \* screw mini-fix pins (B) into the top panel (1)
- \* screw mini-fix pins (B) into the divider (9)
- \* screw mini-fix pins (B) into the side parts (2) & (3)
- \* screw mini-fix pins (B) into the bottom panel (11)

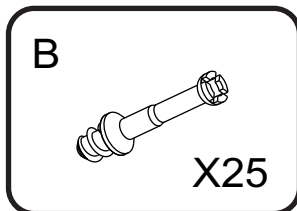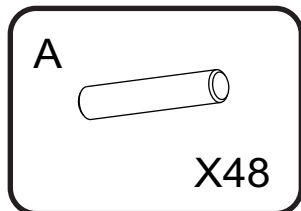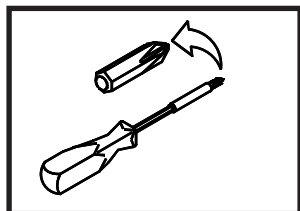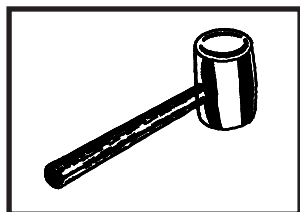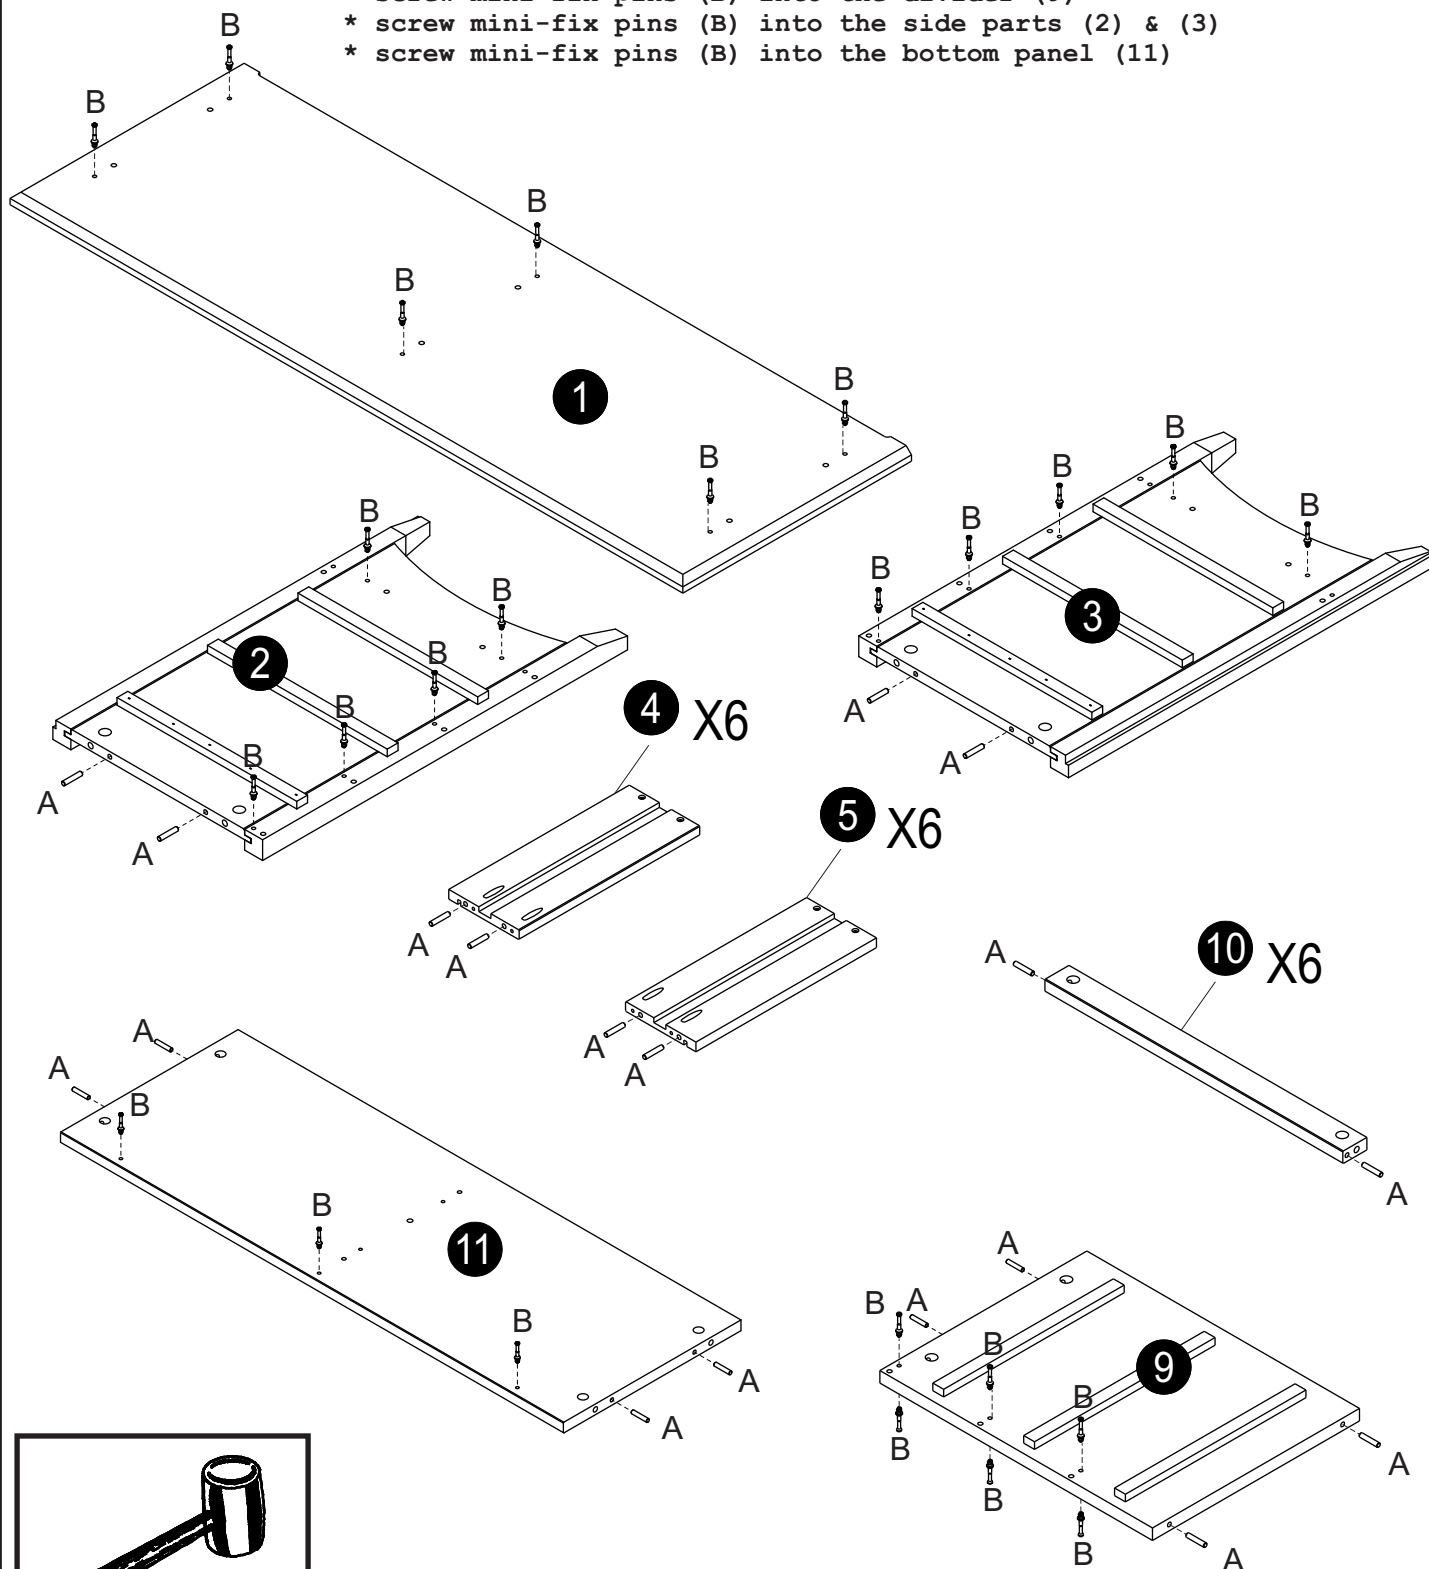





## STEP 2

2. Attach the plastic plug (J) to central foot (12) then screw the adjustable foot (K) into the plastic plug.

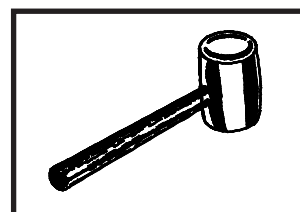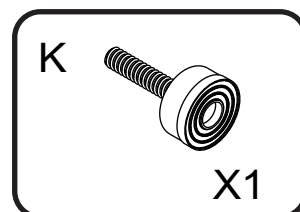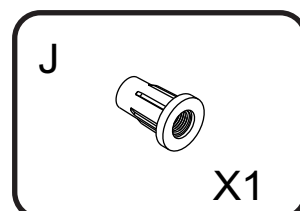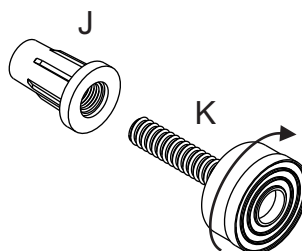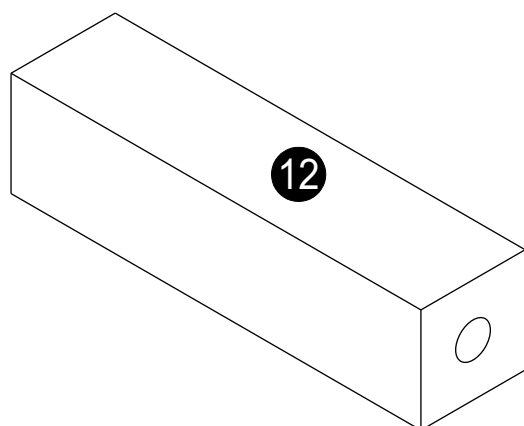


## STEP 3

3. Using the holes as guide, attach the central foot (12) to bottom panel (11) and secure using screw (M) and allen key (N) as shown.

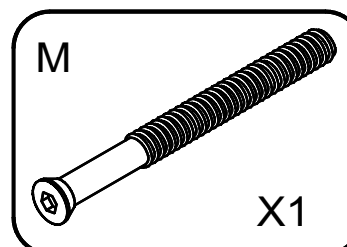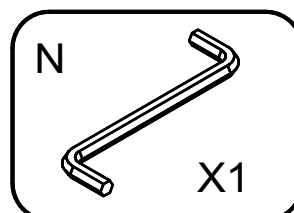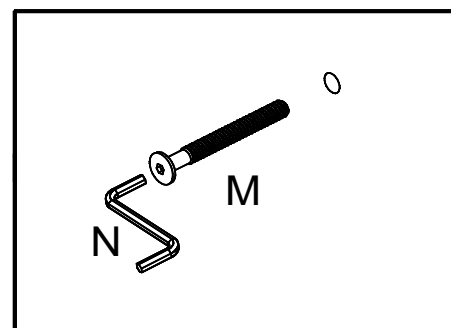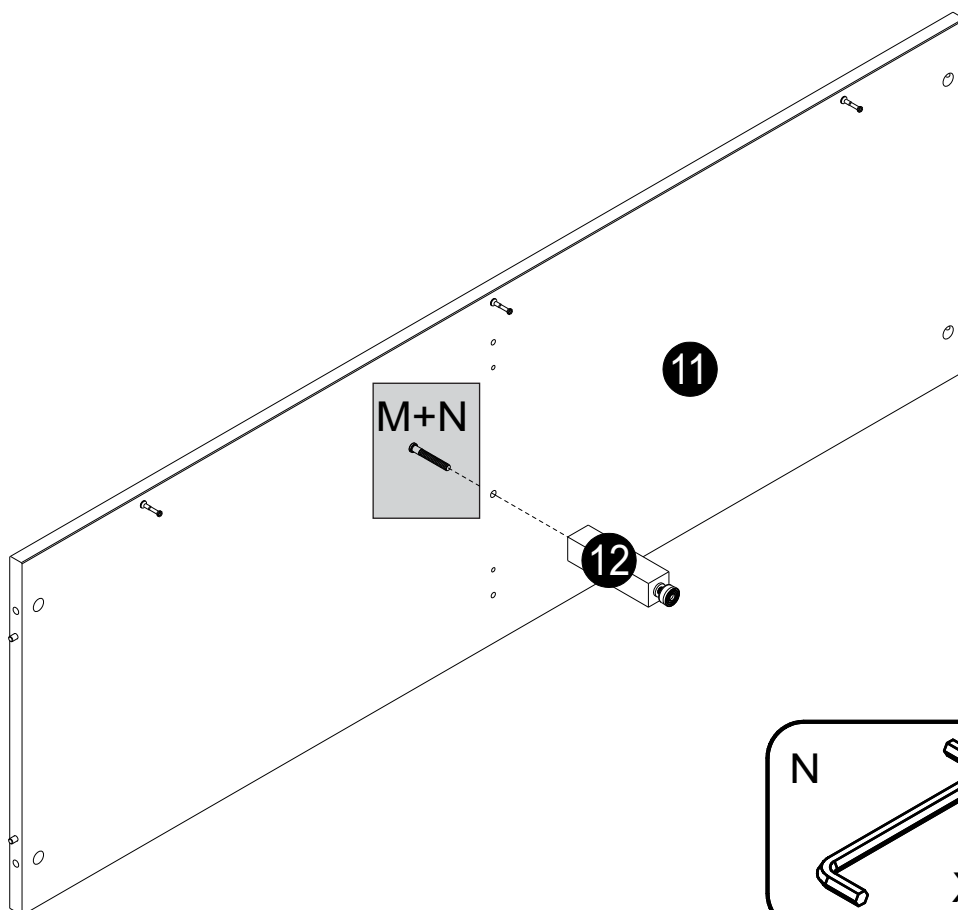


## STEP 4



4. Using the dowels and mini-fix pins previously attached in step 1 as guide, assemble the rails (10) to the division panel (09) as shown.

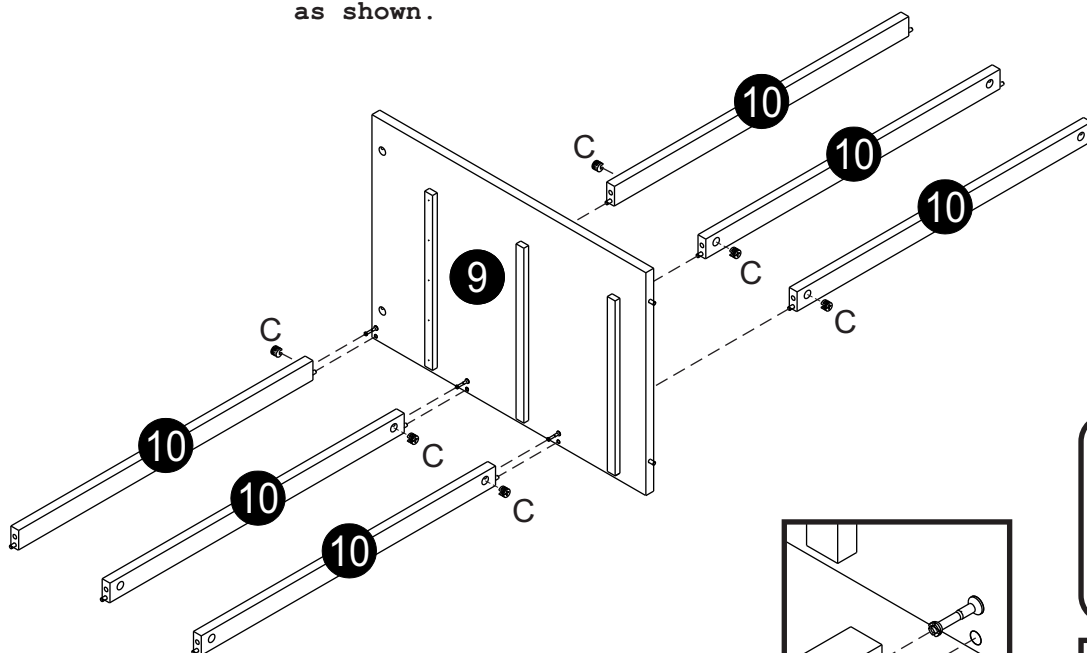

C




X6

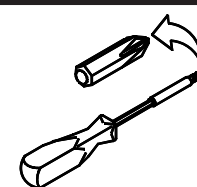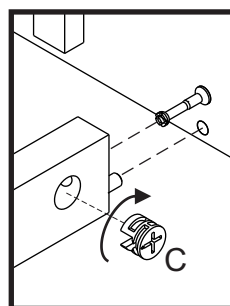

## STEP 5

5. Using the dowels and mini-fix pins previously attached in step 1 as guide, assemble the bottom panel (11) to side (2) and divider (9) as shown. Next align and attach the side (3) making sure all dowels and holes are matched up.

Secure the rails and panel to the sides using mini-fix drums (C) and screws (L) in a clockwise motion as shown:

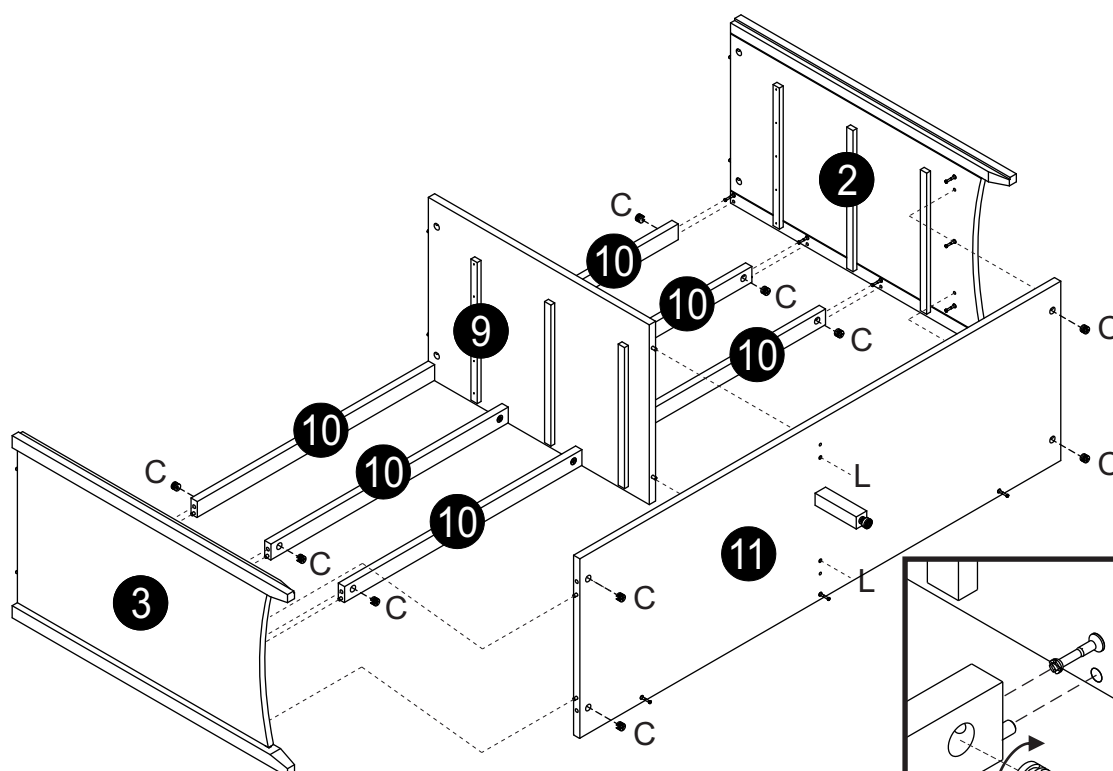

C





X10

L







X2

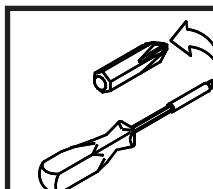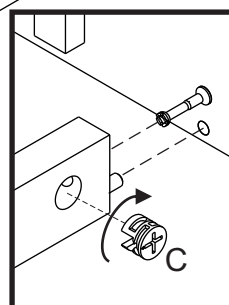




## STEP 6

6. Attach the front rail (13) to the bottom panel (11) using the mini-fix pins as guides, secure using mini-fix drums (C) as shown.

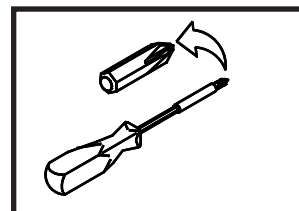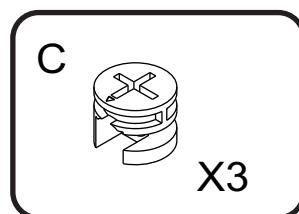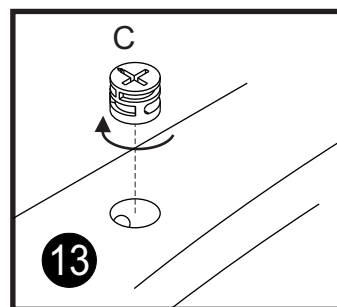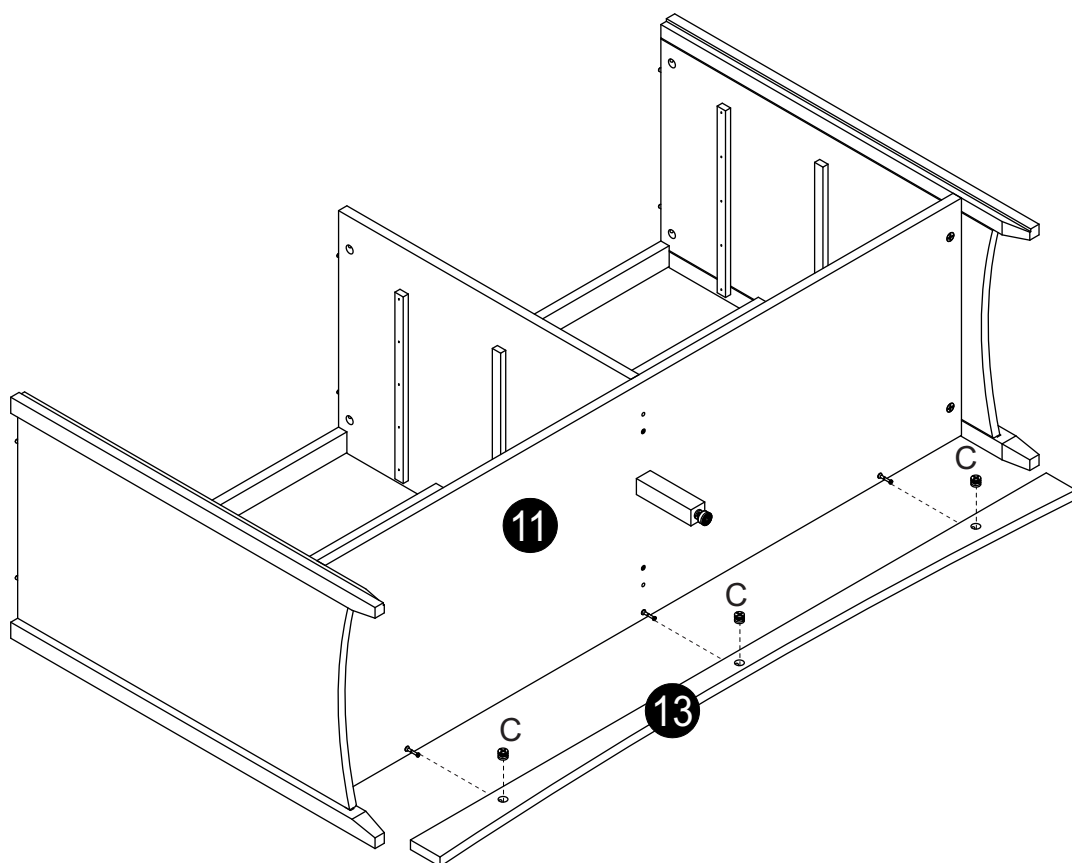


## STEP 7

7. Attach the top panel (1) and secure using mini-fix drums (C) as shown.

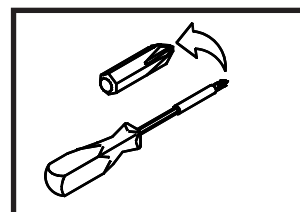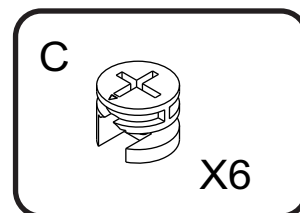
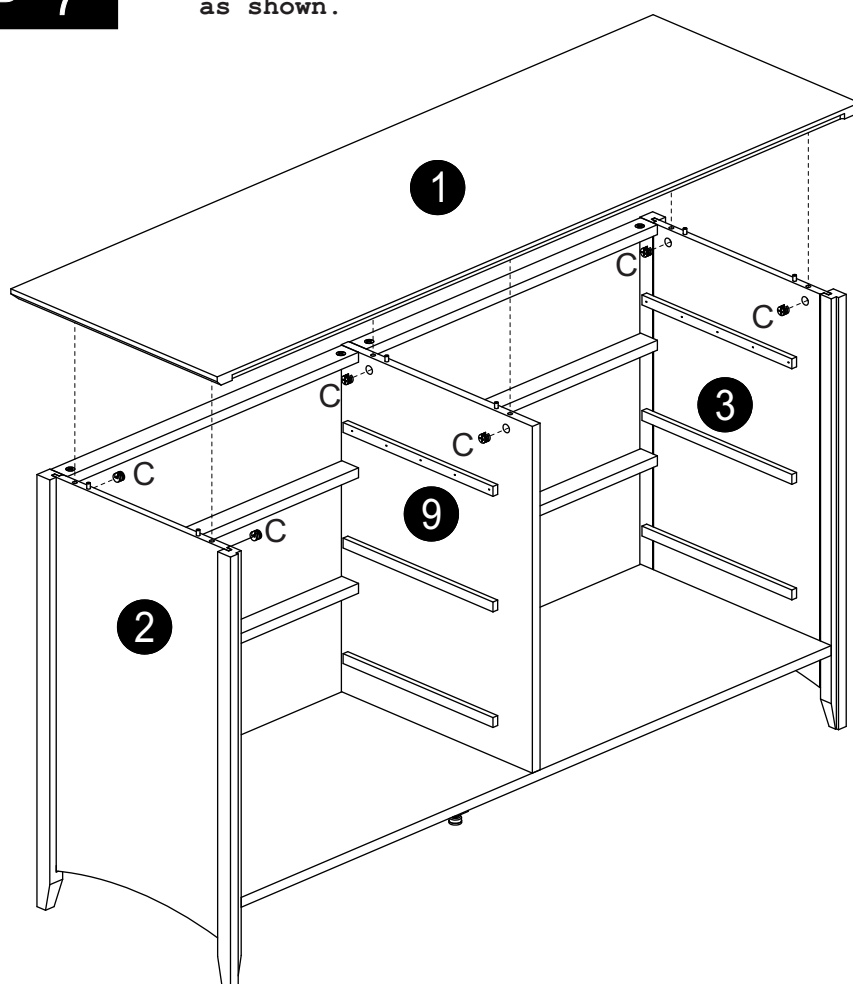


## STEP 8

8. Using dowels as your guide, align and attach a left (4) and a right (5) drawer side to a drawer front (6) as shown. Secure using screws (D) as shown.

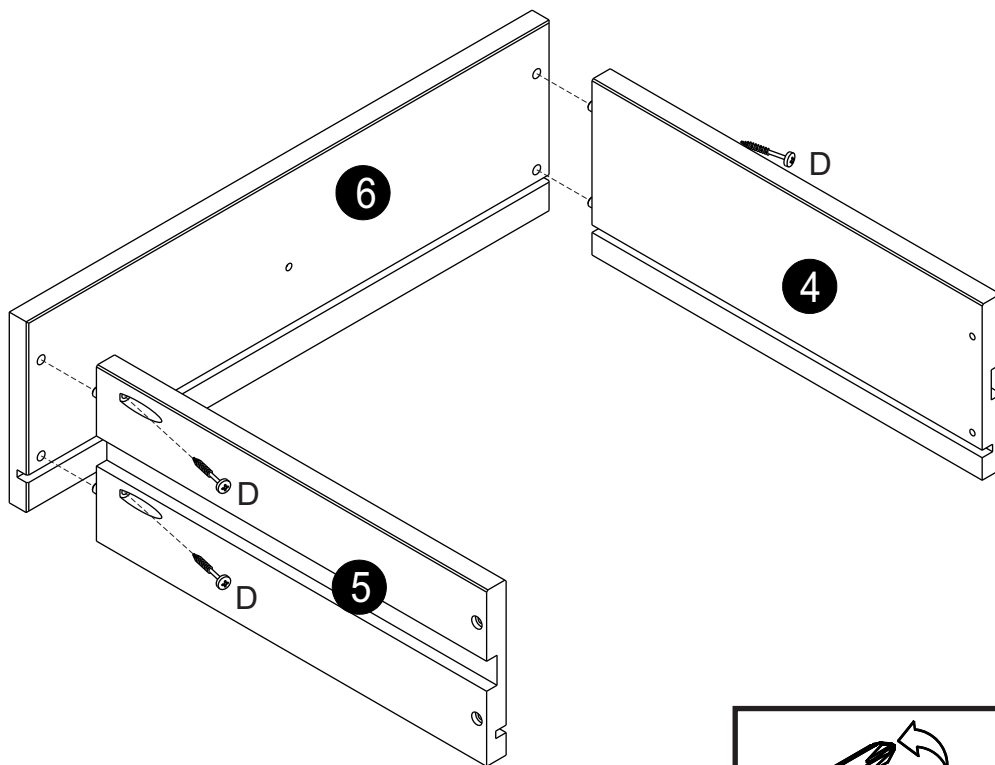


x6

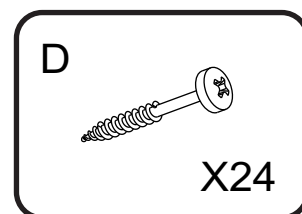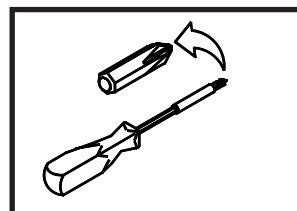

## STEP 9

9. Slide in the drawer bottom (7) as shown.

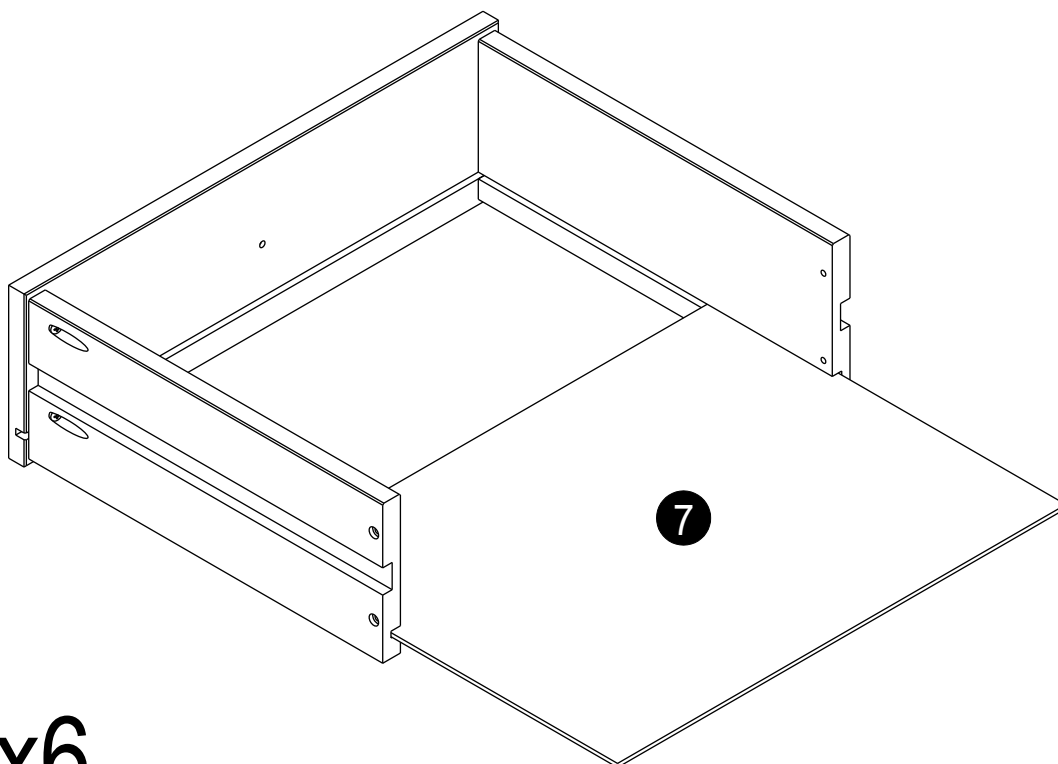


x6





## STEP 10

10. Align and attach the drawer back (8) as shown, secure using screws (D).

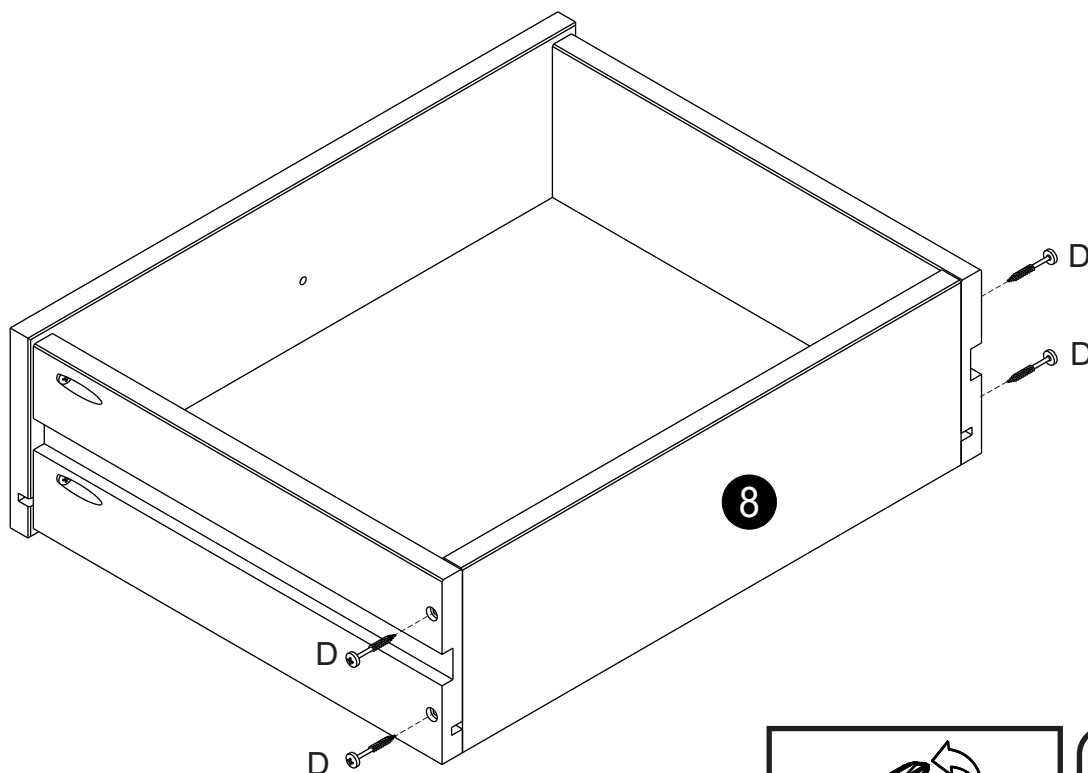


x6





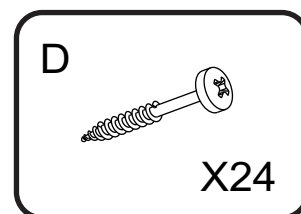
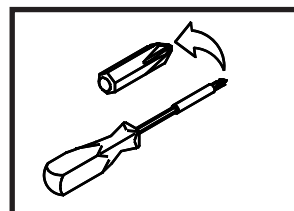


## STEP 11

11. Attach the drawer knobs (F) to the drawer front (6) using screws (G) as shown. Then, attach the plastic drawer stop (H) to the drawer back (8) using screw (I) as shown.

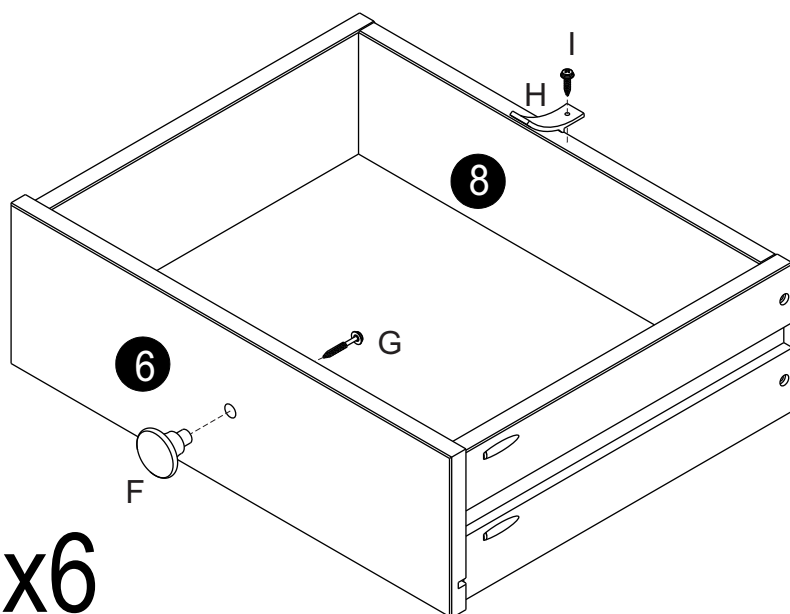


x6

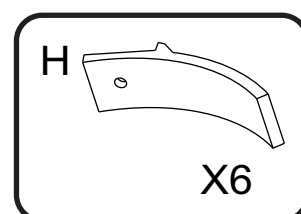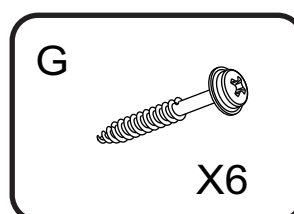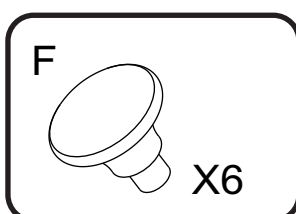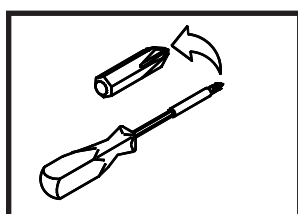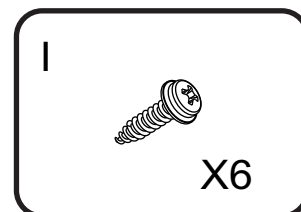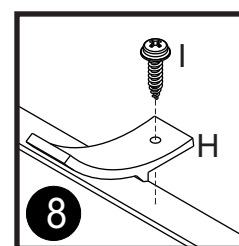

## STEP 12

12. Slide in the drawers. To remove the drawer you must press down the drawer stop as shown.

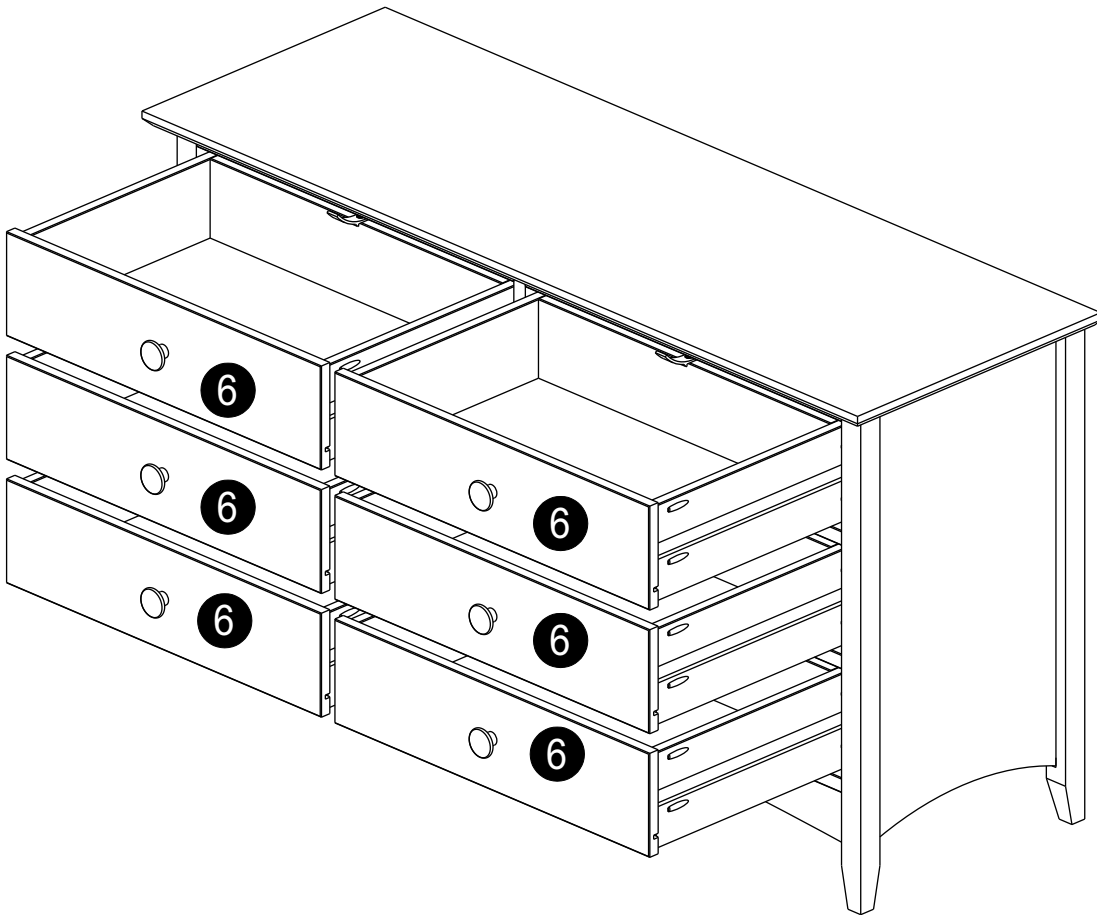

## STEP 13

13. Complete the assembly of your dresser by nailing the back panel (14) using nails (E).

